


- **Tweeter: 5/8" Polycarbonate Dome (single stereo speaker)**
- **Woofer 5-1/4" Black Polypropylene Cone With A Rubber Surround**
- **Frequency Response: 60 Hz to 20 kHz +/- 3dB**
- **Efficiency 89dB**
- **Power Handling 10 to 100 Watts Maximum**
- **Impedance 8 ohms Nominal For Easy Load On Most Amplifiers**
- **Dimensions: 11" High x 11" Dia.**
- **1yr Warranty**

Please read all instruction before Assembling and Installation

ASSEMBLING

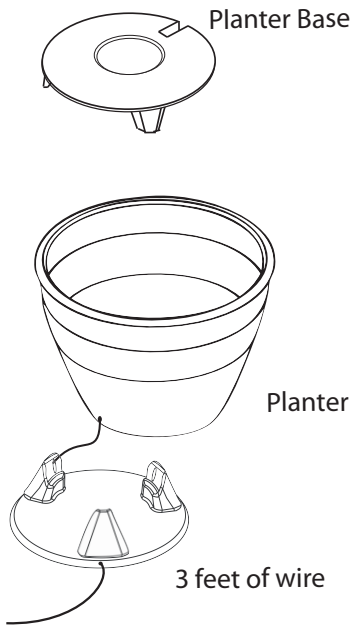

Parts List

- (2) planter speaker
- (2) planter speaker base
- (2) 3 feet of direct burial wire attached to the planter

Step 1

Unpack the planter speaker from the packing box.

Step 2

Run the 1 meter of wire attached to the planter through the hole marked WIRE in the planter base.

Step 3

Attach the planter base to the planter.

INSTALLING


Step 1

Decide the location of the planter speaker and estimate the length of wire you will need. The OSD Audio Planter Speaker reproduce sound in a full 360 degrees. One speaker will cover large area with sound.

Step 2

If it is necessary in your installation, dig a 4" to 5" deep trench to the speaker location to run your speaker wire in.

The wire can also be run on top of the ground if this is acceptable in your installation.

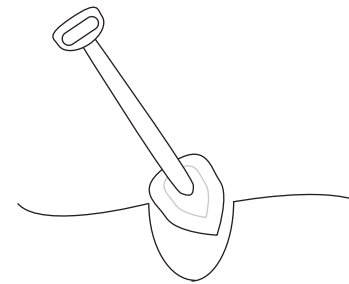

Step 4

The wire that is included with the planter speakers is 4 conductor wire. This wire allows you to send the right and left channel through one piece of wire. Use the following color code when connecting this wire to your receiver or audio.

Attach the wire you have run from your receiver or audio equipment to the 1 meter piece of wire that is included with the planter speakers. Match the colors Red to Red, Black to Black. White to White and Green to Green. When connecting the wires **Direct Burial Wire Connector** are recommended, these are not included with the planter speakers.


Red Wire Right +
Black wire Right -
White wire Left +
Green wire Left -

After the above wires are connected together, connect the wires from your planter speaker to the terminals on the back of your receiver.

Step 5

Turn your receiver on and test the system with your favorite music, if the speakers are operating properly refill the wire trench and cover the wire. You can now refill the planter with soil and the plant of your choice.

Note: the drain hole located in the planting area allows excess water to drain from the planter. The base of the planter is designed to contain the excess water and allow it to evaporate. If an excessive amount of water is required to drain out of the planter water can seep from the base, this is normal operation.

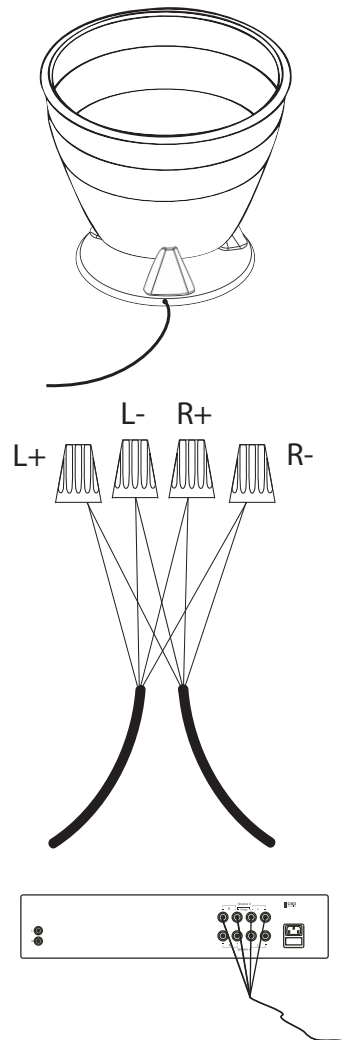

Warranty & Repair

All OSD Audio speaker products have (1) year Limited Warranty against defects in materials and workmanship. Proof of purchase must accompany all claims. During the warranty period OSD will replace any defective part and correct any defect in workmanship without charge for either parts or labor.

OSD Audio may replace returned speakers with a product of equal value and performance. In such cases, some modifications to the mounting may be necessary and are not OSD's responsibility.

For this warranty to apply, the unit must be installed and used according to its written instructions. If necessary, repairs must be performed by OSD. The unit must be returned to OSD at the owner's expense and with prior written permission. Accidental damage and shipping damage are not considered defects, nor is damaged resulting from abuse or from servicing performed by an agency or person not specifically authorized in writing by OSD.

OSD Audio sells products only through authorized dealers and distributors to ensure that customers obtain proper support and service. Any OSD product purchased from an unauthorized dealer or other source, including retailers, mail over dealers and online sellers will not be honored or serviced under existing OSD warranty policy. Any sale of product by an unauthorized source or other manner not authorized by OSD shall void the warranty on the applicable product.

Damage to or destruction of components due to application of excessive power voids the warranty on those parts. In these cases, repairs will be made on the basis of the retail value of the parts and labor. To return for repairs, you must email customer service at RMA@osdaudio.com for a Returned Merchandise Authorization (RMA) number# then the unit must be shipped to OSD at the owner's expense, along with a note explaining the nature of service required. Be sure to pack the speaker(s) in a corrugated container with at least 3 inches of resilient material to protect the unit from damage in transit.

This Warranty Does Not Cover:

Damage caused by abuse, accident, misuse, negligence, or improper operation (installation) • Any products that have been altered or modified • Any product whose identifying number of decal, serial #, etc. has been altered, defaced or removed • Normal wear and maintenance.