

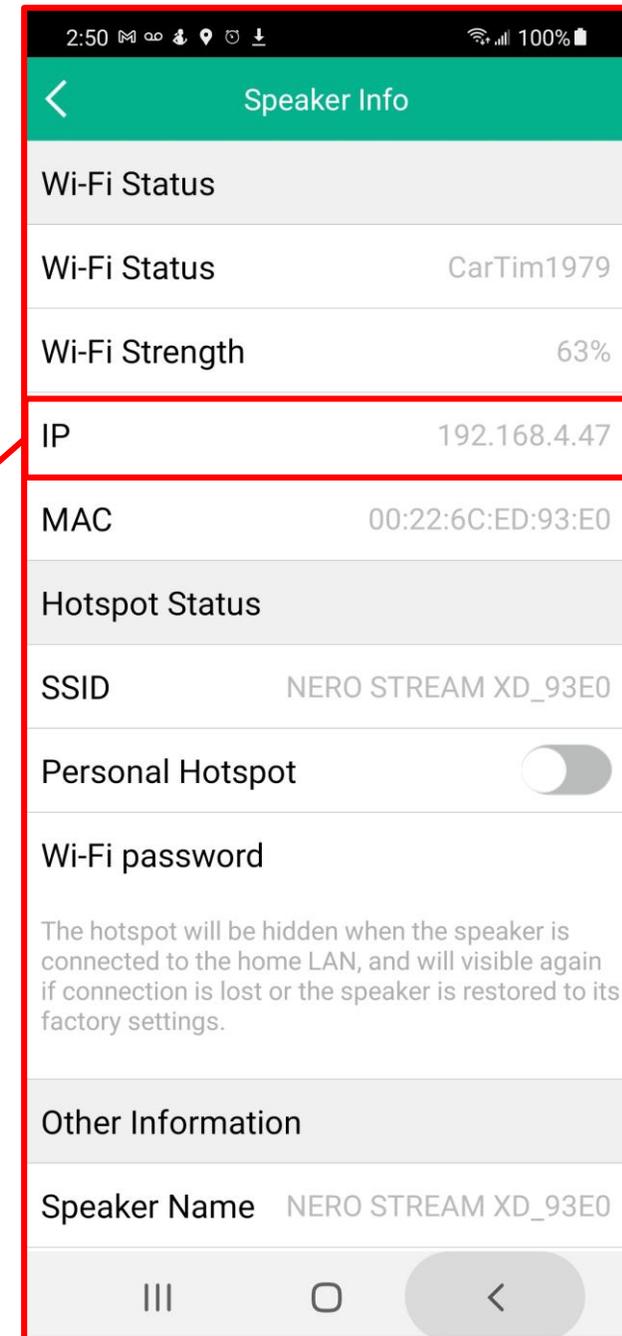


Updating Firmware for SRT1, SRT4 and NERO Stream XD/WRA

1. Get the correct IP Address of the device(s).
- 2) You also can use the IP Address assigned by the WIFI Router. Your computer and speaker must be on the same WIFI Router.

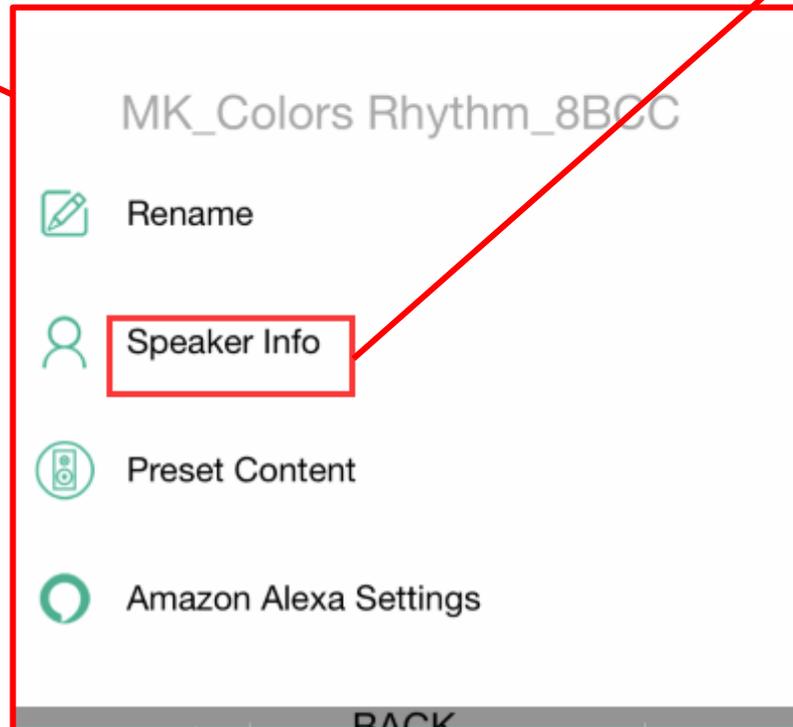

Enter the IP Address in your Browser

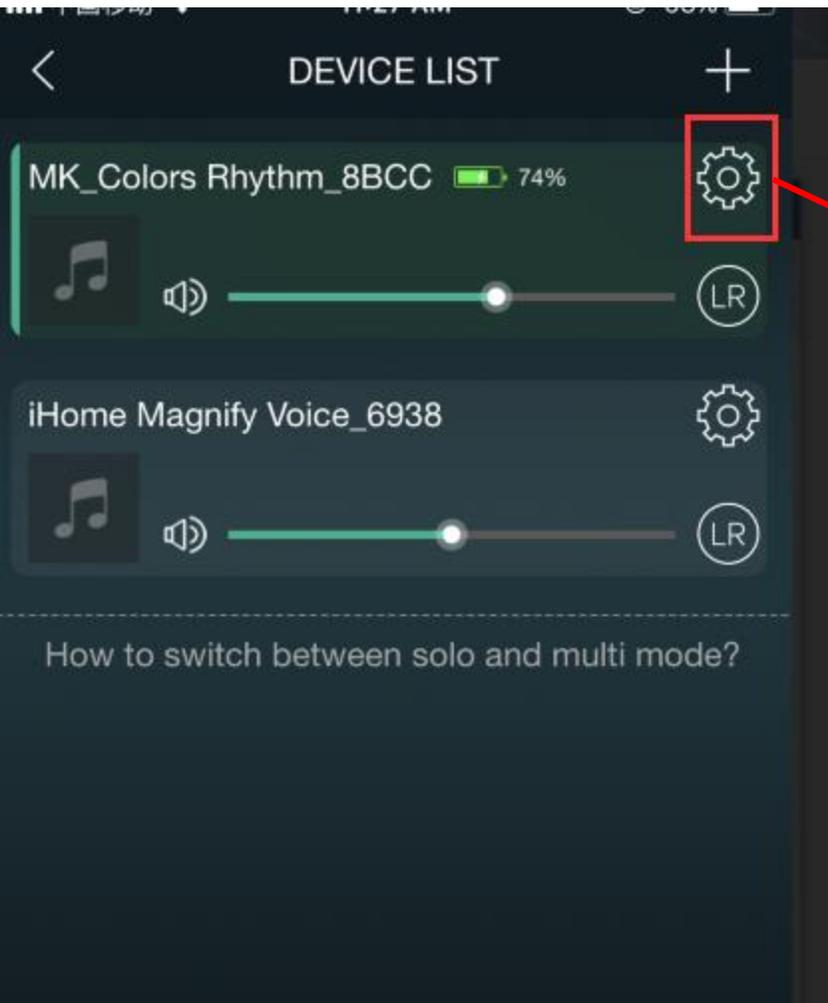

192.168.4.47

192.168.4.47/index.html - 192.168.4.47

192.168.4.47 - Google Search

192.168.4.47/index.html - 192.168.4.47/index.html



Yahoo



Google Maps



Netflix



OSD




Add shortcut

[Celebrate Asian Pacific American Heritage Month: Explore cultural artifacts and more](#)

This screen Pops Up, select System:

Click the System button

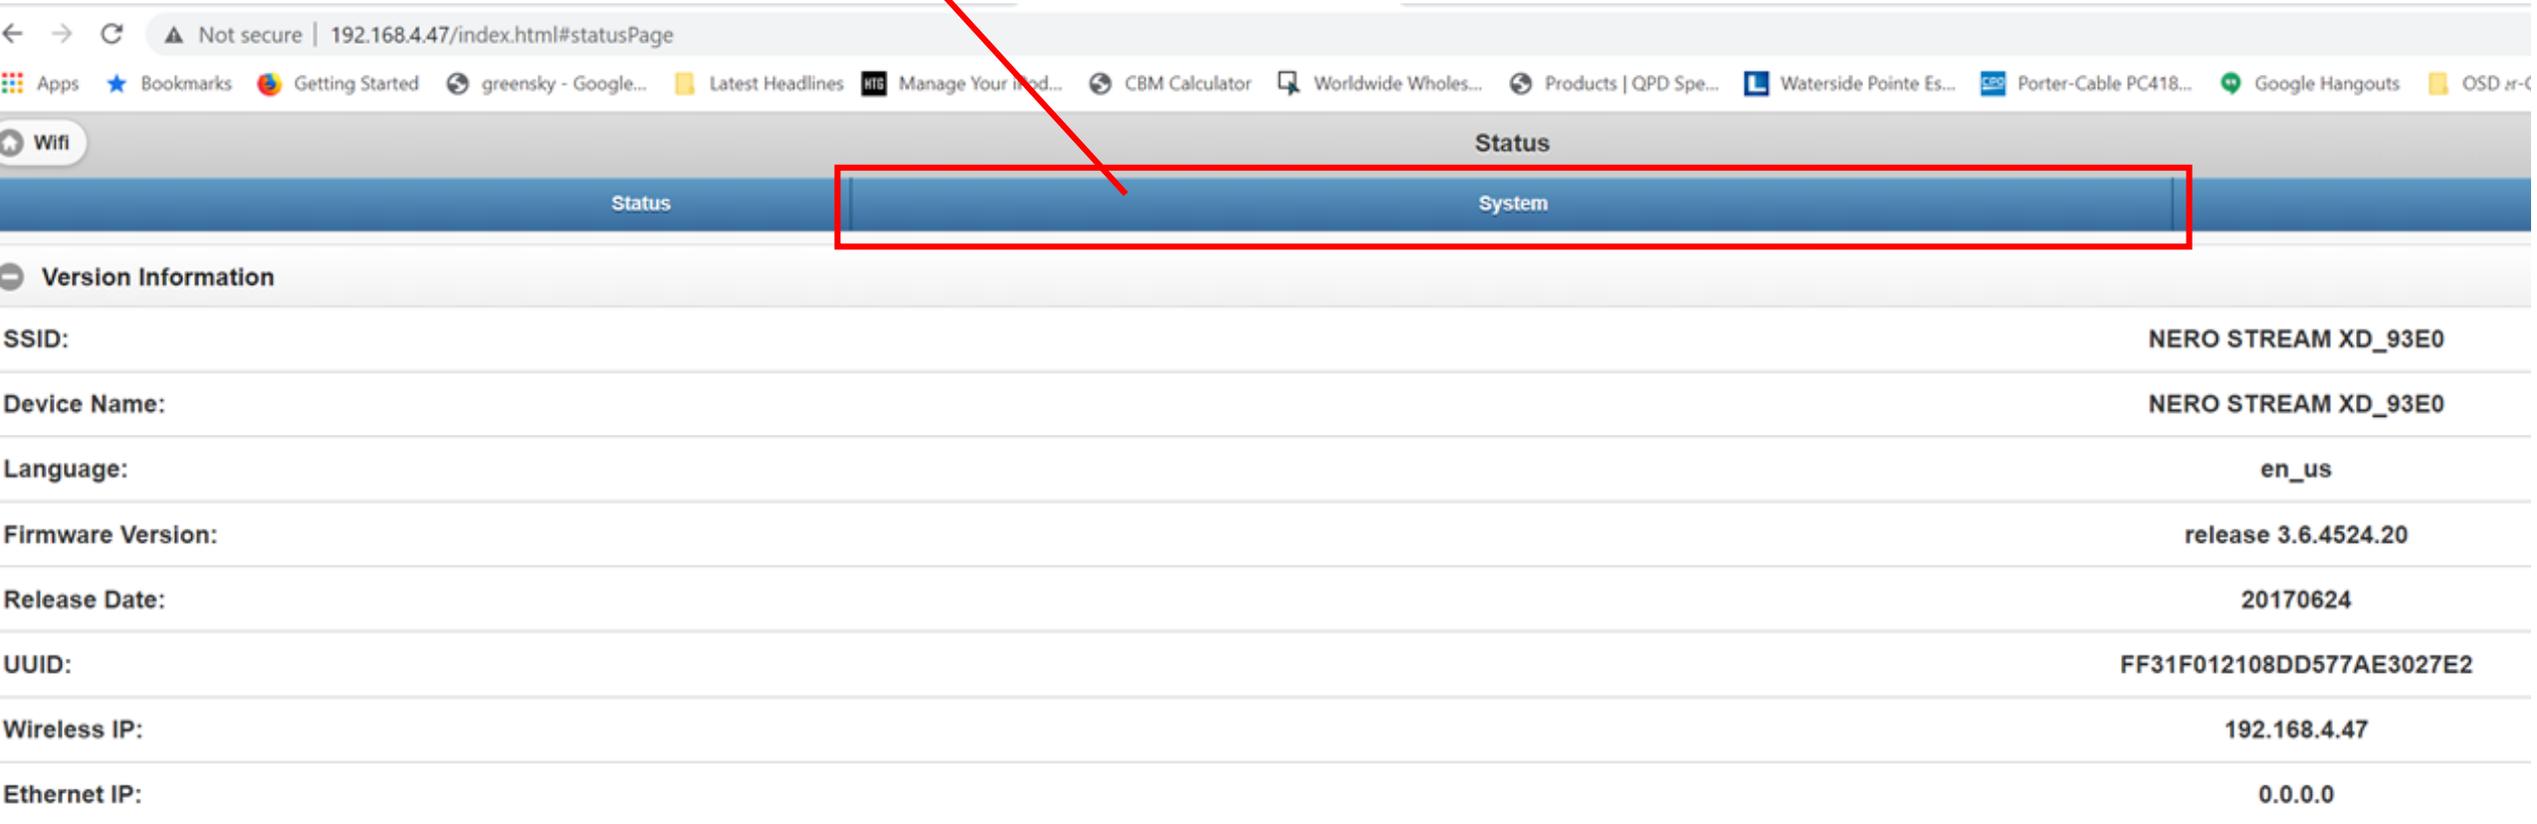

The screenshot shows a web browser interface. The address bar displays "Not secure | 192.168.4.47/index.html#statusPage". The browser's tab bar contains several tabs, including "Wifi", "Status", and "System". The "System" tab is highlighted with a red box, and a red arrow points to it from the text "Click the System button". Below the tabs, there is a "Version Information" section with the following details:

| | |
|-------------------|--------------------------|
| SSID: | NERO STREAM XD_93E0 |
| Device Name: | NERO STREAM XD_93E0 |
| Language: | en_us |
| Firmware Version: | release 3.6.4524.20 |
| Release Date: | 20170624 |
| UUID: | FF31F012108DD577AE3027E2 |
| Wireless IP: | 192.168.4.47 |
| Ethernet IP: | 0.0.0.0 |

Click Firmware Update then upload the updated firmware file:
a31slave_noasr_new_ulmage_20190708

The screenshot shows the 'System' settings page on an iPhone. The 'Firmware Update' section is expanded, showing a 'Firmware Upgrade' option with a 'Choose File' button and the text 'No file chosen'. A red box highlights this section, and a red arrow points from the text above to the 'Firmware Update' option. Below the 'Firmware Upgrade' section are two large blue buttons: 'Apply' and 'Online Update'. The 'Firmware Online Update' section is also visible at the bottom.

Wifi System

Status System Network

+ Language

+ Restore Factory Settings

- Firmware Update


Firmware Upgrade

Choose File No file chosen


Apply

Firmware Online Update

Online Update

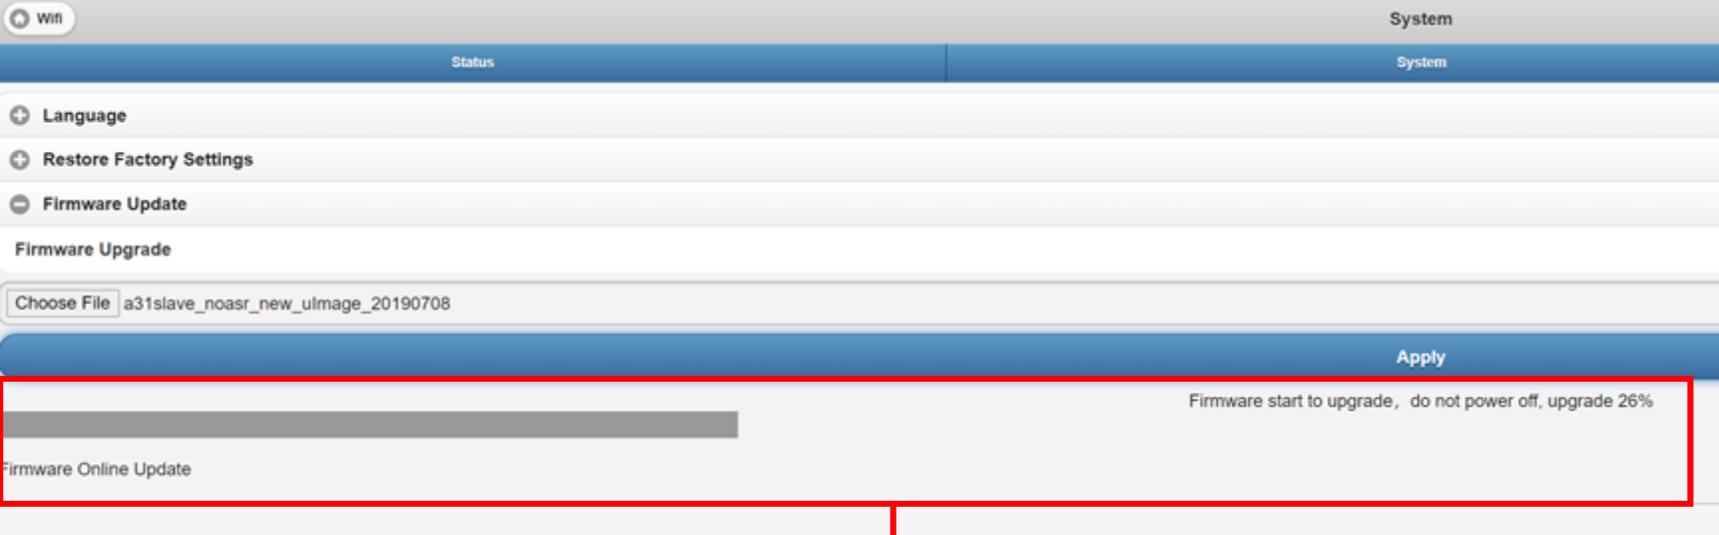


Status bar will show update %, this may take a few minutes

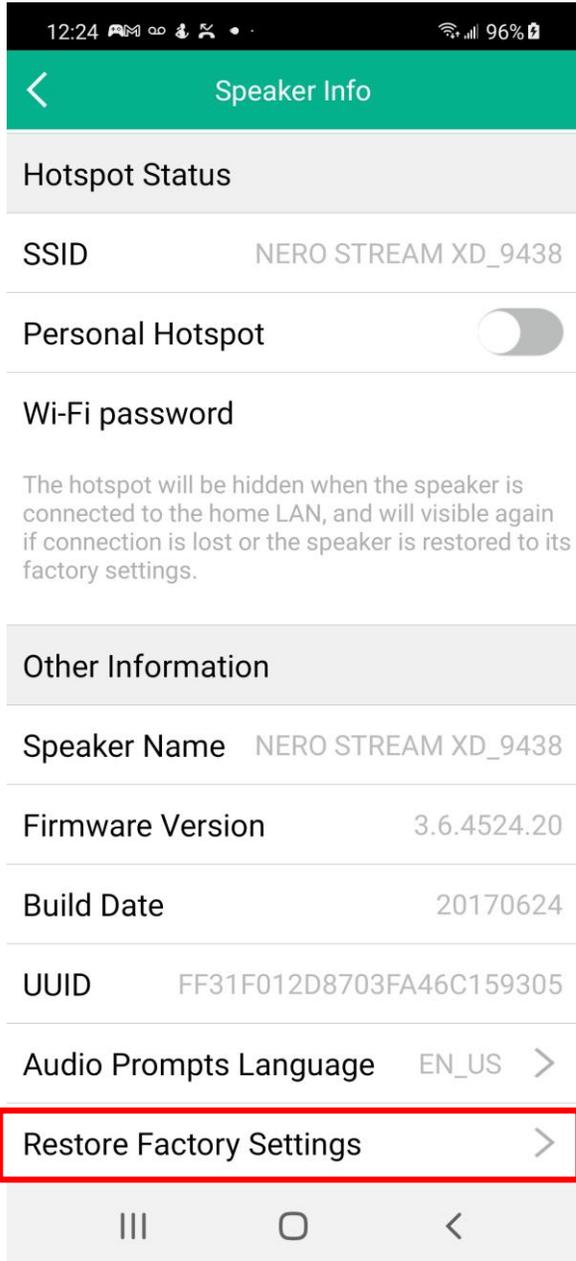

Once Firmware Upload is completed/rebooted, go back to the OSD PLAYER App and restore Factory Settings.


See page 1 for location details

Dialog box will ask to Cancel or Confirm; click Confirm

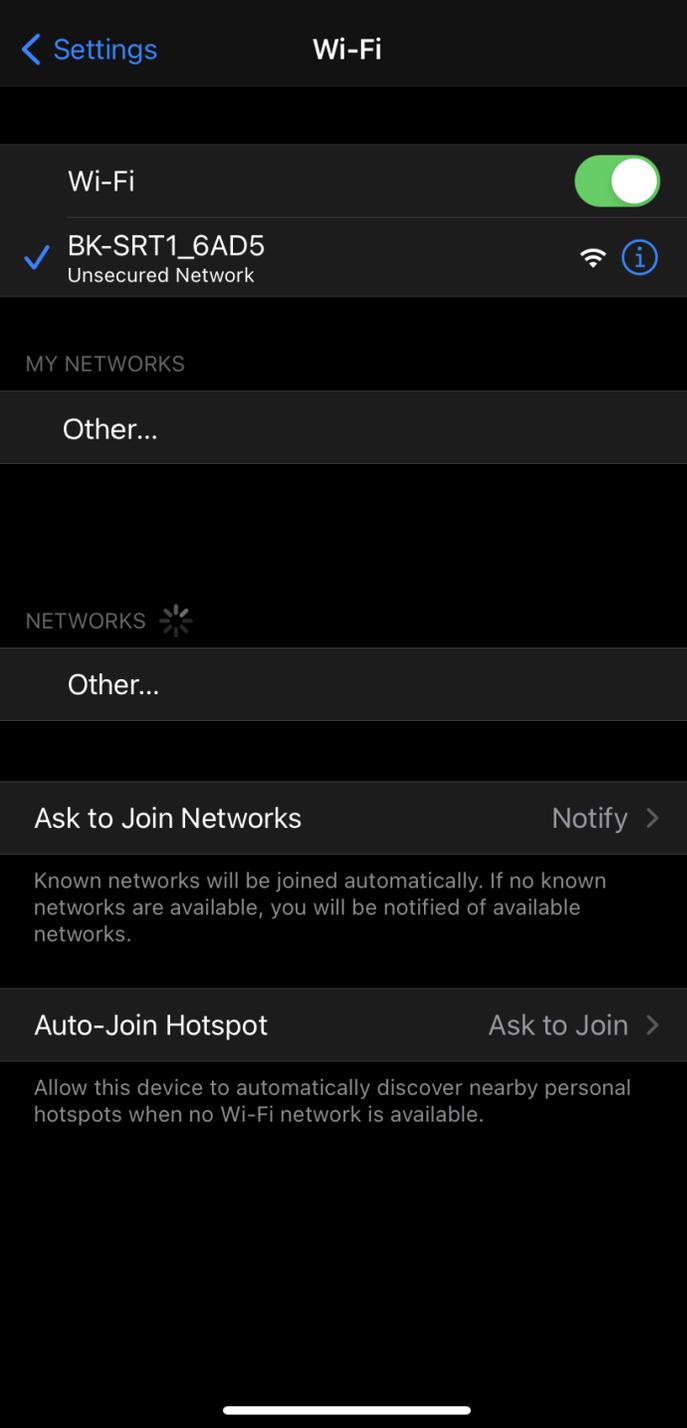

Once Factory Restore is complete, you will need to reconnect the SRT/Stream back your Wi-Fi Network.

Make sure your Phone/Tablet is connected to the Stream or SRT then go back to the OSD PLAYER app.

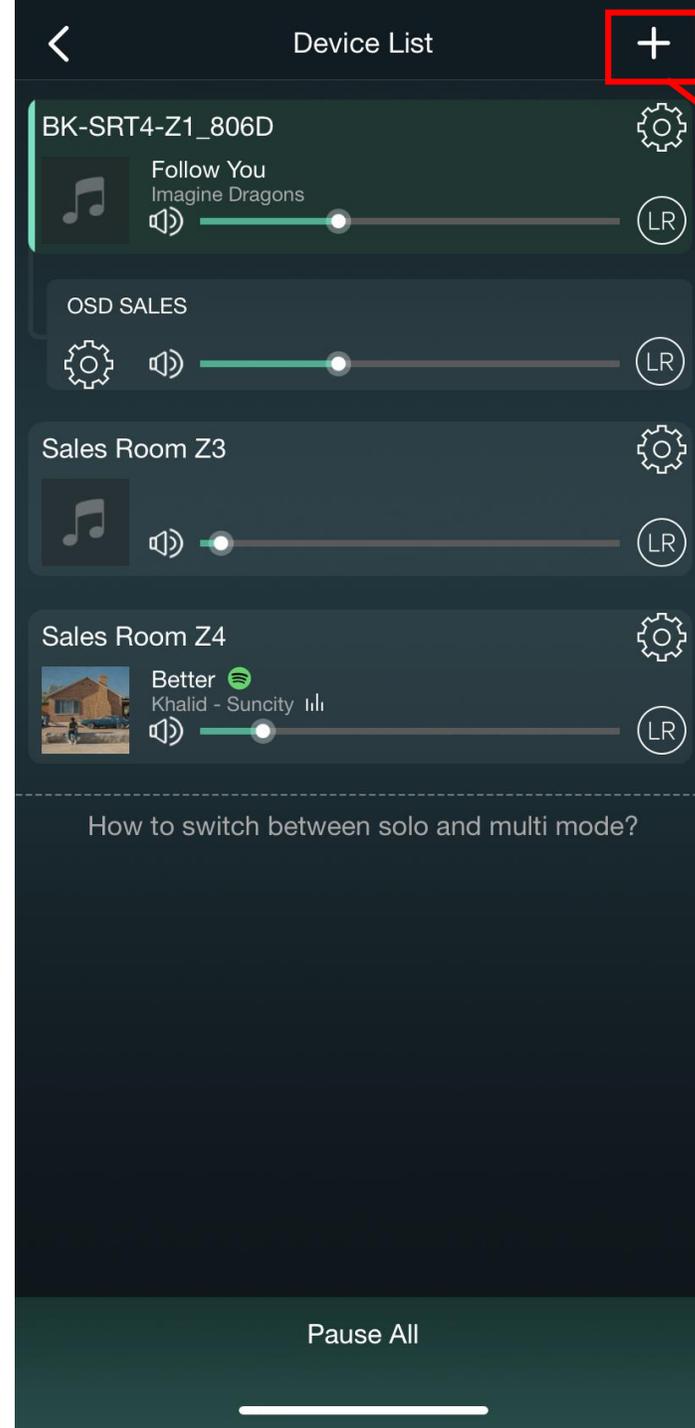

Whether you see the SRT/Stream under the device list or not, you will need to “Add A New Device” by tapping on the “+” symbol on the top right.