

11:31

82



GROUP 1



***After Updating/Installing the OSD Control App, this will be the first screen you are met with. The following instructions will walk-thru setting up the OSD Control App to the Nero-Max12/Max8/Control12.**

Press the "Settings" Symbol, to take you to the 'Settings Page'.

ALL UNITS PARTY ALL ZONES ON ALL ZONES OFF REFRESH

11:31

82



- GROUP NAMING
- ZONE NAMING
- SOURCE NAMING
- CONNECT / INFO**
- CONFIG

Now, press "Connect/Info" to Pair your Wireless Device to the App.



< ⓘ CONNECT / INFO

DEVICE IP **MANUAL**

- GROUP 1

- GROUP 2

- GROUP 3

MOBILE PHONE IP 192.168.5.76

APP VERSION 5.0.3

This will be the next screen. You will want to change this 'Device I.P' setting from "Manual" to "Auto", by pressing the "Manual" Button.



< ⓘ CONNECT / INFO

DEVICE IP **AUTO**

- GROUP 1

- GROUP 2

- GROUP 3

MOBILE PHONE IP 192.168.5.76

APP VERSION 5.0.3

*It should display, this same image.



< ⓘ CONNECT / FIND

```

Start find begin:192.168.5.1
end:192.168.5.15
Finish find begin:192.168.5.1
end:192.168.5.15
Start find begin:192.168.5.16
end:192.168.5.30
Finish find begin:192.168.5.16
end:192.168.5.30
Start find begin:192.168.5.31
end:192.168.5.45
Finish find begin:192.168.5.31
end:192.168.5.45
Start find begin:192.168.5.46
end:192.168.5.60

```

After clicking “Auto”, it will take you to this screen. This screen will show the OSD Control App cycling through different I.P Addresses. This will continue to cycle through until it finds the Nero-Max12/Max8/Control12 on your Network



< ⓘ CONNECT / FIND

```

end:192.168.5.87
Finish find begin:192.168.5.73
end:192.168.5.87
Start find begin:192.168.5.88
end:192.168.5.102
Finish find begin:192.168.5.88
end:192.168.5.102
Start find begin:192.168.5.103
end:192.168.5.117
Finish find begin:192.168.5.103
end:192.168.5.117
Start find begin:192.168.5.118
end:192.168.5.132
Finish find begin:192.168.5.118
end:192.168.5.132
Start find begin:192.168.5.133
end:192.168.5.147
Finish find begin:192.168.5.133
end:192.168.5.147
Start find begin:192.168.5.148
end:192.168.5.162
Finish find begin:192.168.5.148
end:192.168.5.162
Start find begin:192.168.5.163
end:192.168.5.177
Finish find begin:192.168.5.163
end:192.168.5.177
Start find begin:192.168.5.178
end:192.168.5.192

```



< ⓘ CONNECT / INFO

DEVICE IP	AUTO
- GROUP 1	192.168.5.80
- GROUP 2	NOT FOUND
- GROUP 3	NOT FOUND
MOBILE PHONE IP	192.168.5.76
APP VERSION	5.0.3

Once the OSD Control App finds the Nero-Max12/Max8/Control12 I.P Address, it will refresh, and come back to this Screen. If you only have x1 Nero-Max12/Max8/Control12, then it will only display "Group 1" with an available I.P Address.

If you have multiple Nero-Max12/Max8/Control12 units, then it will display these other available units I.P Address in a different 'Group' number.



< (i) CONNECT / INFO

DEVICE IP AUTO

- GROUP 1 192.168.5.80

- GROUP 2 NOT FOUND

- GROUP 3 NOT FOUND

MOBILE PHONE IP 192.168.5.76

APP VERSION 5.0.3

Use the "back-arrow" to go back to the previous screen.



< Pencil GROUP NAMING >

Pencil ZONE NAMING >

Pencil SOURCE NAMING >

(i) CONNECT / INFO >

Wrench CONFIG >

Use the "back-arrow" from the "Settings Page" to go back to the 'Home Screen'.

11:33

82



GROUP 1



ZONE1



SOURCE1

VOLUME (23)



ZONE2



SOURCE1

VOLUME (20)



ZONE3



SOURCE1

VOLUME (8)

ALL UNITS PARTY ALL ZONES ON ALL ZONES OFF REFRESH

*Once your device is connected, this will be the updated Home Screen.

Use the "Drop-Down Arrow" to access additional features like – Bass, Treble, and Balance controls.

11:34

82



GROUP 1



ZONE1



SOURCE1

VOLUME (23)



BALANCE



TREBLE (10)



BASS (1)



ZONE2



SOURCE1

VOLUME (20)

ALL UNITS PARTY ALL ZONES ON ALL ZONES OFF REFRESH

If this "Power" Symbol is lit 'Green', it means that Zone is 'On' and ready to play audio. If the "Speaker" Symbol is highlighted, then that Zone is on 'Mute'.

11:33

82



GROUP 1



ZONE1

POWER OFF

SOURCE1

VOLUME (23)

- +

ZONE2

POWER OFF

SOURCE1

VOLUME (20)

- +

ZONE3

POWER OFF

SOURCE1

VOLUME (8)

ALL UNITS PARTY

ALL ZONES ON

ALL ZONES OFF

REFRESH

“All Units Party”, represents ‘Party Mode’ feature. This option will Turn ‘On’ all Zones, and ‘Source 1’ will have priority as the selected Audio Source, and play audio to all Zones. Each of the Zones will all be in-sync, and adjusting the Volume Slider for x1-Zone, will affect the slider for ALL Zones.

“All Zones On”, will enable all the Zones to Power ‘On’. Any previous saved Settings, Source, and Volume will be enabled per Zone.

“All Zones Off”, will quickly Power ‘Off’ all Zones at once. This will eliminate the need to scroll through each Zone, and turning ‘Off’ each Zone individually.



- GROUP NAMING
- ZONE NAMING
- SOURCE NAMING
- CONNECT / INFO
- CONFIG



GROUP NAMING

GROUP 1 [GROUP 1]

GROUP 2 [GROUP 2]

GROUP 3 [GROUP 3]

CANCEL

SAVE

Here, you can change/adjust the "Name" of each Group. The 'Group' will represent your unit – Nero-Max12/Max8/Control 12



GROUP 1

M MASTER

01 [MUTE]

02 [MUTE]

03 [MUTE]

04 [MUTE]

05 [MUTE]

06 [MUTE]

07 [MUTE]

08 [MUTE]

09 [MUTE]

10 [MUTE]

11 [MUTE]

12 [MUTE]

13 [MUTE]

14 [MUTE]

15 [MUTE]

16 [MUTE]

17 [MUTE]

18 [MUTE]

19 [MUTE]

20 [MUTE]

21 [MUTE]

22 [MUTE]

23 [MUTE]

24 [MUTE]

25 [MUTE]

26 [MUTE]

27 [MUTE]

28 [MUTE]

29 [MUTE]

30 [MUTE]

31 [MUTE]

32 [MUTE]

33 [MUTE]

34 [MUTE]

35 [MUTE]

36 [MUTE]

37 [MUTE]

38 [MUTE]

39 [MUTE]

40 [MUTE]

41 [MUTE]

42 [MUTE]

43 [MUTE]

44 [MUTE]

45 [MUTE]

46 [MUTE]

47 [MUTE]

48 [MUTE]

49 [MUTE]

50 [MUTE]

51 [MUTE]

52 [MUTE]

53 [MUTE]

54 [MUTE]

55 [MUTE]

56 [MUTE]

57 [MUTE]

58 [MUTE]

59 [MUTE]

60 [MUTE]

61 [MUTE]

62 [MUTE]

63 [MUTE]

64 [MUTE]

65 [MUTE]

66 [MUTE]

67 [MUTE]

68 [MUTE]

69 [MUTE]

70 [MUTE]

71 [MUTE]

72 [MUTE]

73 [MUTE]

74 [MUTE]

75 [MUTE]

76 [MUTE]

77 [MUTE]

78 [MUTE]

79 [MUTE]

80 [MUTE]

81 [MUTE]

82 [MUTE]

83 [MUTE]

84 [MUTE]

85 [MUTE]

86 [MUTE]

87 [MUTE]

88 [MUTE]

89 [MUTE]

90 [MUTE]

91 [MUTE]

92 [MUTE]

93 [MUTE]

94 [MUTE]

95 [MUTE]

96 [MUTE]

97 [MUTE]

98 [MUTE]

99 [MUTE]

100 [MUTE]

ZONE1 [SOURCE1] VOLUME (23)

ZONE2 [SOURCE1] VOLUME (20)

ZONE3 [SOURCE1] VOLUME (8)

ALL UNITS PARTY

ALL ZONES ON

ALL ZONES OFF

REFRESH



GROUP NAMING



ZONE NAMING



SOURCE NAMING



CONNECT / INFO



CONFIG



In the 'Settings Page', "Zone Naming" is where you can access the "Zone Names" and change the name.

Ex. Bedroom 1, Bathroom, Kitchen, Dining Room.



ZONE NAMING

ZONE1

ZONE1

ZONE2

ZONE2

ZONE3

ZONE3

ZONE4

ZONE4

ZONE5

ZONE5

ZONE6

ZONE6

CANCEL

SAVE



GROUP NAMING



ZONE NAMING



SOURCE NAMING



CONNECT / INFO



CONFIG



In the 'Settings Page',
"Source Naming" is where
you can access the "Source
Names" and change the
name.

Ex. TV, A/V Receiver,
Streamer, etc.



SOURCE NAMING

SOURCE1

SOURCE1

SOURCE2

SOURCE2

SOURCE3

SOURCE3

SOURCE4

SOURCE4

SOURCE5

SOURCE5

SOURCE6

SOURCE6

CANCEL

SAVE



- <  GROUP NAMING >
-  ZONE NAMING >
-  SOURCE NAMING >
-  CONNECT / INFO >
-  CONFIG >

In the 'Config', "Configuration Page" is where you can access the different 'Groups' and the devices in each 'Group'.

If you have multiple devices, you will want to enter this page, and adjust the device that you currently own from the available Drop-down Menu. Based on the unit you have, you will be able to choose from "Max12", "Max8", and "Control12".



<  CONFIG

GROUP 1

MASTER	MAX12	▼
SLAVE 1	MAX12	▼
SLAVE 2	MAX12	▼

GROUP 2

MASTER	MAX12	▼
SLAVE 1	MAX12	▼
SLAVE 2	MAX12	▼

GROUP 3

MASTER	MAX12	▼
SLAVE 1	MAX12	▼