

FCC Information:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your product. Changes or modifications not expressly by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warranty Information:

All OSD AUDIO electronics have (2) year Limited Warranty against defects in materials and workmanship. Proof of purchase must accompany all claims. During the warranty period OSD AUDIO will replace any defective part and correct any defect in workmanship without charge for either parts or labor

OSD AUDIO may replace returned electronics with a product of equal value and performance. In such cases, some modifications to the mounting may be necessary and are not OSD AUDIO's responsibility.

For this warranty to apply, the unit must be installed and used according to its written instructions. If necessary, repairs must be performed by OSD AUDIO. The unit must be returned to OSD AUDIO at the owner's expense and with prior written permission. Accidental damage and shipping damage are not considered defects, nor is damaged resulting from abuse or from servicing performed by an agency or person not specifically authorized in writing by OSD Audio

OSD AUDIO sells products only through authorized dealers and distributors to ensure that customers obtain proper support and service. Any OSD AUDIO product purchased from an unauthorized dealer or other source, including retailers, mail order dealers and online sellers will not be honored or serviced under existing OSD AUDIO warranty policy. Any sale of product by an unauthorized source or other manner not authorized by OSD AUDIO shall void the warranty on the applicable product.

Damage to or destruction of components due to application of excessive power voids the warranty on those parts. In these cases, repairs will be made on the basis of the retail value of the parts and labor. To return for repairs, you must email customer service at RMA@OSDAUDIO.com for a Returned Merchandise Authorization (RMA) number then the unit must be shipped to OSD AUDIO at the owner's expense, along with a note explaining the nature of service required. Be sure to pack the product(s) in a corrugated container with at least 3 inches of resilient material to protect the unit from damage in transit.

This Warranty Does Not Cover: Damage caused by abuse, accident, misuse, negligence, or improper operation (installation) • Any products that have been altered or modified • Any product whose identifying number of decal, serial #, etc. has been altered, defaced or removed • Normal wear and maintenance.



WSK100

WIRELESS SUBWOOFER KIT

USERS GUIDE



SPECIFICATIONS

Features:

- 2.4GHz digital wireless link provides crystal clear audio.
- 34-channel selection.
- Up to 100 feet (30.5m) operation distance between transmitter and receiver (line of sight).

Specs:

Audio Output Level	2V
Frequency Response	20-200Hz
Audio Distortion	<1%
Signal to Noise Ratio	>80dB

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

PACKAGE CONTENTS

- Transmitter
- RCA Cable
- Users Guide
- Receiver
- 9V AC Adapter (2)


SET UP

Place the transmitter and receiver within 100 feet of each other, on a flat surface or mounted on a wall.

1. With the audio source off, connect the transmitter to the subwoofer jack with the RCA cable.
2. Connect the supplied AC adapter (9V, 200mA) to the transmitter DC IN 9V jack, and then plug it into a standard household outlet.
3. Connect the receiver to your subwoofer with the RCA cable.
4. Connect the supplied AC adapter (9V, 200 mA) to the receiver DC IN 9V jack, and then plug it into a standard household outlet.


NOTE:

- Use only the supplied AC adapters. Using adapters not designed for this product may cause damage.
- If you mount the receiver on a wall, do not block the ventilation slots.
- Unplug the AC adapters from the AC outlet before disconnecting from the transmitter or receiver.

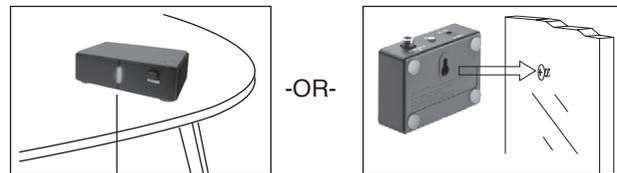

LED Indicator

SET UP

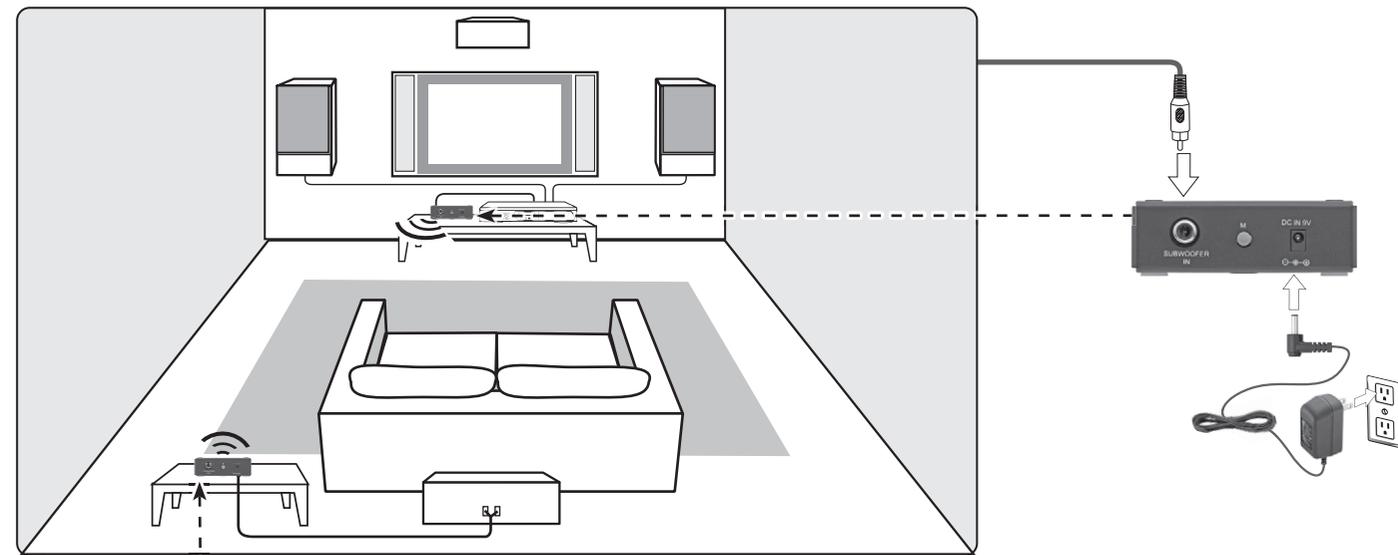

Using Your Subwoofer Kit

When connected, the transmitter and the receiver LED's light green. When the audio source is active, the speakers automatically activate, and the LED's light blue.

NOTE:

After powering on, if there is no signal input within 17 minutes, the subwoofer kit enters standby mode.

Optimize Your System

many surround systems let you adjust the delay between the front and rear speakers. To optimize your setup, adjust the rear speaker delay response by about 20 milliseconds.

Changing Channels

If you experience any interference, press and hold the **M** button on both units. The units will automatically match up.

