



AMP300 | STEREO AMPLIFIER



OWNERS MANUAL



AMP300 OWNERS MANUAL

WARNING

- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
- TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE PLUG TO WIDE SLOT, FULLY INSERT.


 <p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<div>CAUTION</div> <div>RISK OF ELECTRIC SHOCK DO NOT OPEN</div> <p>Warning: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.</p>	 <p>The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	---	--

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Read all warnings.
4. Follow all instructions.
5. Do not use this appliance near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near heat sources such as radiators, heat registers, stoves, or other appliance (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the appliance.
11. Only use attachments or accessories specified by the manufacturer.
12. Unplug the appliance during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel. Servicing is required when the appliance has been damaged in anyway, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the appliance, the appliance has been exposed to rain or moisture, does not operate normally, or has been dropped.

This appliance shall not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed on appliance.

AMP300 OWNERS MANUAL

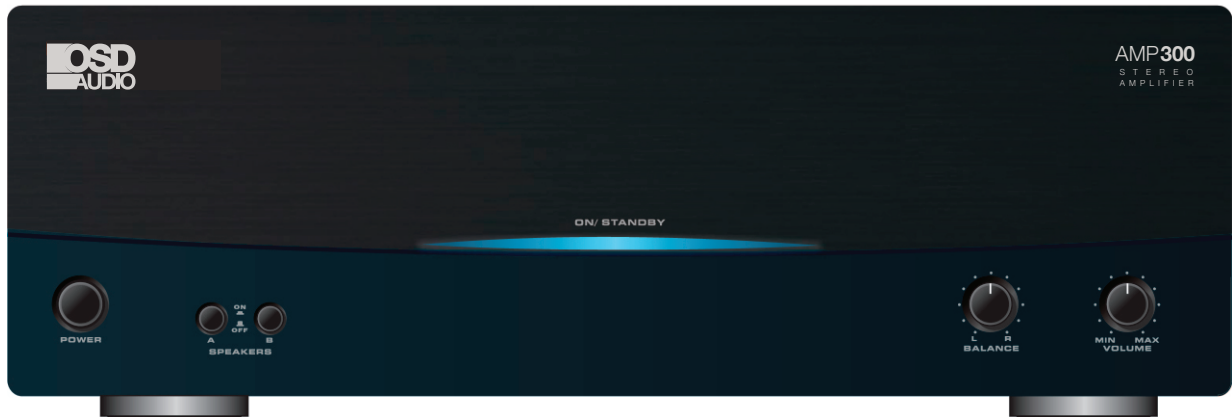

Congratulations on your purchase of OSD Power Amplifier.

Please take a few moments to read the entire manual, and be sure to retain this document for future reference. Please read and observe all safety instructions detailed on each page.




Note: If any part of this product is damaged or missing, Please call OSD AUDIO Return Department at (562) 697-2600

Using the controls/ Front Panel

Power


The front panel switch will manually switch the AMP300 Power Amplifier on or off. Blue and red LEDs behind the faceplate lens indicate its power status. Whenever the amplifier's power switch is in the "ON" position and the amplifier is in "active" status the lens is illuminated blue. If the amplifier is "ON" but in the "standby" status the lens is illuminated red.

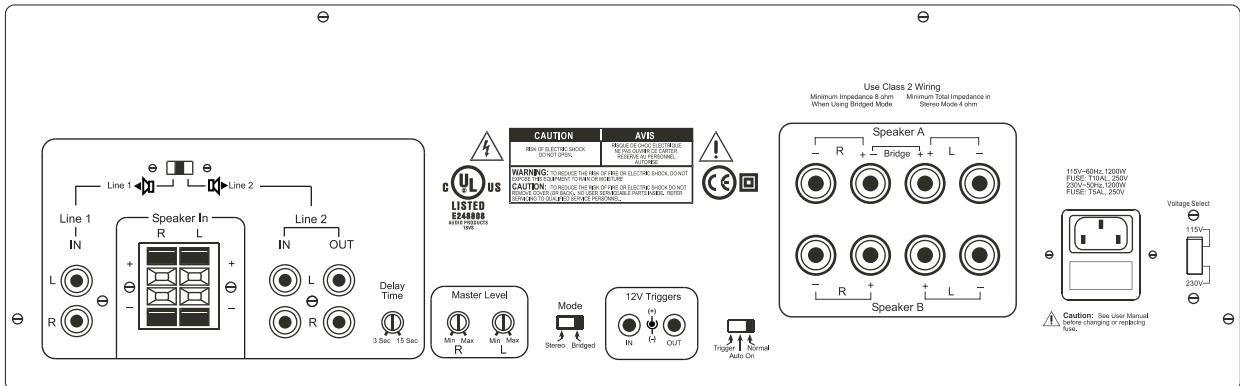

Using the controls/ Back Panel

Power

The AMP300 Power Amplifier can be turned on and off independently via a switch on the front panel, by signal sensing, or remotely by a triggered DC input. There is a switch located on the lower edge of the rear panel of the amplifier to select how you would like to turn on the AMP300 Power Amplifier. If you would like to control the unit's power on/Power off status manually from the front, place the switch in the "Normal" position. If you would like to control unit's power on/Power off status by means of signal sensing, place the switch in the "Auto On" position. If you would like to control the unit's power on/Power off status by a DC Remote trigger, place the switch in the "Trigger" position, and connect the remote triggering device to the terminal labeled "Triggers IN" next to the switch.

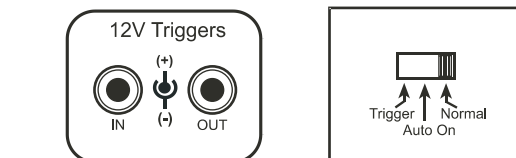

You should use a 3.5mm phone plug in the "IN" connector to make this connection. The tip of the connector is positive, and the sleeve of the connector is negative. A second terminal in the same block is labeled "OUT". This allows for remote turn-on of other devices when the AMP300 Power Amplifier is powered on. Use the same polarity for the terminals of this plug. Please read the owner's manual for any devices you are attempting to connect in this manner to ensure compatibility.




Note: The front panel power switch must be in the "ON" position for the triggers or "Auto ON" features to operate.

AMP300 OWNERS MANUAL

Master Level Control

Each channel is able to control its volume independently to the other channel. At the bottom left of the rear panel, there are 2 screwdriver adjustment knobs which correspond to the volume level of the channel identified by a channel designator below it.

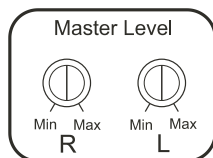


The volume range is labeled Minimum to Maximum and has 1 step (clicks) at a center position as a reference. Rotate the knob clockwise to increase output, and counterclockwise to decrease output.

These adjustments set the master level and if not configured at initial setup of the AMP300 Power Amplifier may adversely affect the performance of the amplifier.

To set the Master Level controls begin by adjusting the front panel "Volume Trim" to its fully clockwise position. Also set the front panel "Balance Trim" to its center position. Now adjust both the Left and Right Channel Master Level controls to set a "Maximum" desired volume for the AMP300 Power Amplifier in its application, as well as setting an appropriate "Balance" from left to right.

Now the front panel Volume and Balance Trim controls can make fine adjustments to your set up in this application.

RCA input

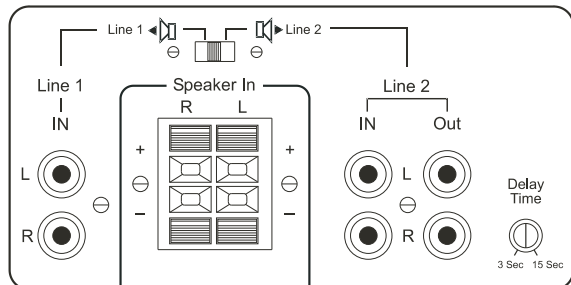

There is a total of 2 pair of RCA inputs on the back panel of the AMP300 Power Amplifier. These RCA inputs are labeled as "Line 1 Input" and "Line 2 Input". They are also designated with an "R" or an "L" as Right channel or Left Channel inputs respectively.


"Line 2 Input" should be used as the "primary" or normal input for various line level sources that may be available locally to the amplifier. "Line 1 Input" is a priority switching input that can be used for a second input, such as, the output of a second source, and will take over as the primary input whenever a signal with a minimum of 5mV of level is present. Whenever, there is an absence of signal at the "Line 1 Input" RCAs, or a signal with less than 5mV level, the input will revert back to the normal "Line 2 Input" signal. An adjustable delay of 3 or 15 seconds can be set to accommodate the nature of the source connected to the "Line 1 Input" RCAs.

As an example, if the "Line 1 Input" source was a CD Changer, the delay could be adjusted to prevent switching back to the "Line 2 Input" source while the changer moves from one disk to another.

Speaker Level Input

The AMP300 Power Amplifier also provides a pair of speaker level input for those applications where either of the sources has only speaker level output signal available. This input routes the speaker level signal to either the Line 1 or Line 2 Input.

Mode Switch

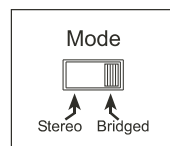

To the right to the Master Level controls is a switch labeled "Mode" with "Stereo" and "Bridged" as options. If you will be connecting one or two pair of speakers to the amplifier, place the switch in the "Stereo" position.

If you will be using a pair channels to power a single mono speaker, place the switch in the "Bridged" position, and be sure to read the section titled "Speaker Terminals" below.

When you are using the amplifier in "Bridged" mode, the amplifier is now a single channel mono amplifier. The two channels have been internally connected in series by the "Bridged" switch. The AMP300 Power Amplifier is now capable of 250W, bridged into 8 ohms with less than 0.2% THD+N.

For the amplifier to operate properly in the bridged mode you should have both the "right and left" inputs connected to the amplifier. The amplifier will sum these signals and create your mono source.


Note: Both of the "Master Level" controls should be set to the same position, and the "Balance Trim" should be set to the center or 12 o'clock position for the amplifier to operate normally in the "Bridged" mode.

Note: This Amplifier will supply 470W in "Bridged" mode. Please verify that your speakers are capable of handling such power to avoid possible damage!

Speaker Terminals

Each channel has two pair of multi-way binding post. These are the red and black screw posts on the rear of the amplifier. Terminals are provided for "A" and "B" pairs of speaker for each channel. If you will be using the amplifier as a stereo amplifier (not a bridged amplifier) you will connect the speaker's positive (Red) terminal to the amplifier's positive (Red) terminal using the appropriate gauge speaker wire, and the speaker's negative (Black) terminal to the amplifier's negative (Black) terminal (immediately beside the positive terminal) using the appropriate gauge speaker wire. If you would like to use one pair of channels bridged, place the "Mode" switch in the "Bridged" position and use both RED terminals to connect to the speaker. (See illustration) on page 5)

AMP300 OWNERS MANUAL

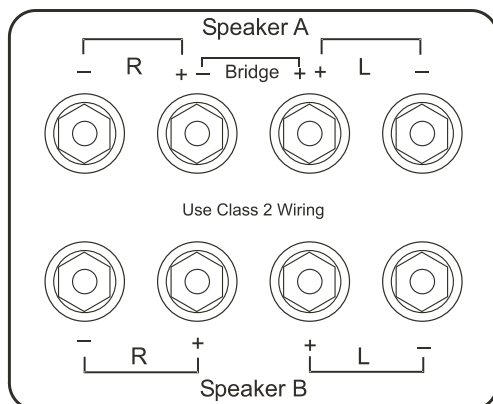

NOTE: Only one pair of channels can be bridged together. Do not attempt to bridge both A & B speaker terminals, as this may result in a lower impedance than the amplifier is designed to accommodate, and may damage your amplifier. **The minimum impedance for the total load connected to a pair of channels in the "Bridged" mode is 8-ohm.**

AMP300 Power Amplifier Specifications

Power Bandwidth 20Hz-20kHz:

150W per Channel into 8 ohm loads with less than 0.2% THD+N
235W per Channel into 4 ohm loads with less than 0.2% THD+N
Stable down to a 2 ohm load.
470W Bridged Mono into 8 ohms with less than 0.2% THD+N

Crosstalk:>65dB@1KHz, referred to rated power at 8 ohms
Frequency Response:(20Hz to 20kHz) +0.0dB, -0.5dB
Signal to Noise ratio: -103dB referred to rated power at 4 ohms
AC Power Consumption: 1200W (all channels driven)
Net Weight: 35.2 lbs (16.0 kgs)
Gross Weight: 44.0 lbs (20.0 kgs)

AC Mains Fuse:
115V~60Hz T10AL, 250V
230V~50Hz T5AL, 250V

NOTE: This amplifier is capable of use with standard US voltage (115V) as well as European voltage (230V). The amplifier will be preset for the voltage of the country it is sold in. Use with other voltages requires some changes to be made to the amplifier. Should you wish to use the amplifier in a country other than the one for which it was purchased, **please contact OSD AUDIO at (562) 697-2600**

Limited Warranty

OSD AUDIO: warrants its amplifier products against defects in materials and workmanship for a limited period of time. For a period of two years from date of original purchase, we will repair or replace the product, at our option, without charge for parts and labor.

This limited warranty applies only to purchases from authorized OSD AUDIO retailers. This limited warranty is extended only to the original purchaser and is valid only to customers in USA.

Customers are required to provide a copy of the original sales invoice from an authorized OSD AUDIO dealer when making a claim against this limited warranty. This limited warranty only covers failures due to defects in materials or workmanship that occur during normal use. It does not cover failures resulting from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, modification, service by anyone other than OSD AUDIO or damage that is attributable to acts of god. It does not cover costs or transportation to OSD AUDIO or damage in transit. The customer should return their defective product, freight prepaid and insured, to OSD AUDIO, only after receiving a Returned Merchandise Authorization (RMA) number.

This warranty will become void if the serial number identification has been wholly or partially removed, altered or erased. Repair or replacement under the terms of this warranty does not extend the terms of this warranty. Should a product prove to be defective in workmanship or material, the customer's sole remedies will be repair or replacements as provided under the terms of this warranty. Under no circumstances shall OSD AUDIO be liable for loss or damage, direct, consequential or incidental, arising out of the use of or inability to use the product.

Applications Powering Speaker Outdoors


Whenever you are using speakers outdoors, you should be aware that sound does not travel like it would be in your home. Without the reflective surfaces of walls and ceilings, sound at outdoors will dissipate quickly. Therefore, in an outdoor situation the AMP300 Power Amplifier provides the opportunity to bridge adjacent channels, effectively doubling the available power for your speakers. This can help to overcome the problem of using speakers outdoors assuming the speakers chosen are capable of handling the additional power.

It should be noted that the AMP300 Power Amplifier is rated to operate into a minimum 8-ohm bridged load. Therefore, if you are using more than a single 8-ohm loudspeaker in bridged mode you should consider using an impedance matching speaker selector, such as the SSVC-6 or possibly using an impedance matching volume control, such as the SVC 70, SVC 100, SVC 300, VKR 120, VMS 100 or VMS 300 in a weatherproof housing available at your favorite DIY store or electrical supply. The choice of a volume control would allow you the additional flexibility of being able to attenuate the volume whenever necessary.

AMP300 OWNERS MANUAL

Stereo Setup

In this configuration, the mode switch is set to "Stereo" for stereo operation. Connect the line out jacks from a stereo preamplifier or source to the Line 2 Input jacks of your AMP300 Power Amplifier. Next connect your speakers to the terminals marked "SPEAKER A" observing proper polarity (see "Speaker Terminals" on Page 4). Connect a second (optional) pair of speakers to the terminals marked "SPEAKER B". Select between the "A" or "B" speakers using front panel speaker selection buttons.

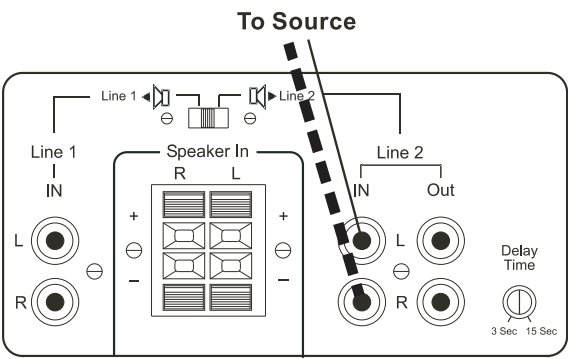


Mono Setup

In this configuration, the mode switch is set to "Bridged". Connect the line out from a preamplifier to the right and left Line 2 Input of your AMP300 Power Amplifier. Connect your mono speaker to the terminals of your AMP300 Power Amplifier, following the instructions in "Speaker Terminals" on Page 4. Use the "Master Level" controls on the rear panel to adjust the volume. Leave the balance set to the center detent position.

Setup For Multiple Sources


In the application shown below, a distributed audio system is connected to the AMP300 Power Amplifier as a local zone amplifier via the Line 2 Input. Normally the distributed audio system will be the audio source for the AMP300 Power Amplifier.

The distributed audio is then passed on to be used by additional zones or sub zones in the distributed system via the Line 2 outputs.

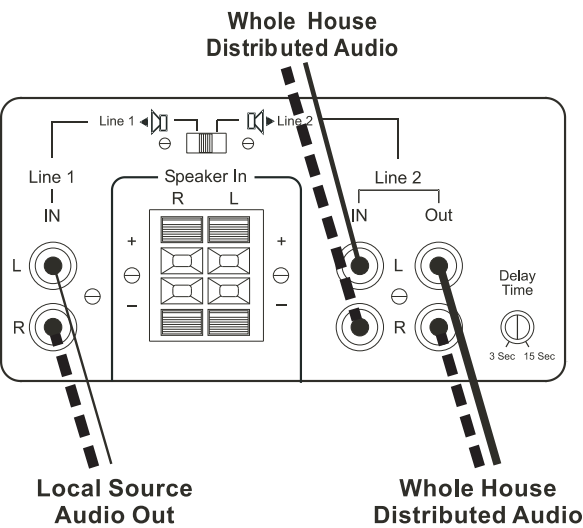

The audio output of a local source, such as MP3 Player, CD, television, computer, etc., is connected to the AMP300 Power Amplifier via the Line 1 Input, and whenever the local source is active its signal will take priority over the distributed audio signal present at Line 2. However, the distributed audio signal will still be present at the Line 2 Input. In this circumstance the audio output of the local source will be heard via the AMP300 Power Amplifier. Once the local source is turned off or muted, the AMP300 Power Amplifier will automatically switch back the distributed audio system as an audio source, assuming the local source remains inactive. The delay time adjustment determines when switch back to the normal source will occur. This set up assumes all incoming signals are at line level and not at speaker level.

If the Whole House Distributed Audio was only available as a speaker level signal you could connect it to the "Speaker In" connections and set the switch above to the "Line 2" position, or toward the right hand position of the switch. The AMP300 Power Amplifier will no longer be able to pass the Whole House Distributed Audio to another zone via the Line 2 output.

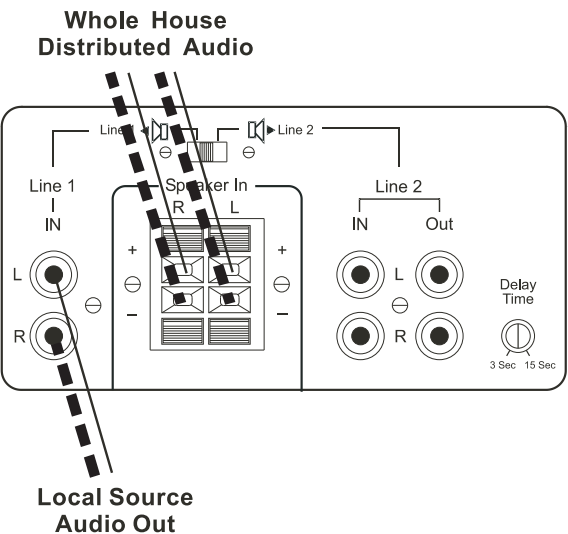

If you have any questions regarding how to set this up, please call OSD AUDIO support at (562) 697-2600.